

FACELIFTED DYNAMIC LED TAIL LIGHTS (2018+) FOR MK7.5

SKU# 22187 MFG# 5609459706-KT2



TOOLS REQUIRED

- PRY TOOL (SKU# 1799)
- -8MM SOCKET + RATCHET
- PLIERS


WHAT'S INCLUDED

- -MK7.5 FACELIFT TAIL LIGHTS (4)
- -WIRING HARNESS


Coding Instructions begin on page 11

THIS MATERIAL IS FOR REFERENCE ONLY. IMPROPER INSTALLATION OR MISUSE OF THIS PRODUCT COULD RESULT IN FAILURE OR DAMAGE. USP MOTORSPORTS IS NOT RESPONSIBLE FOR ERRORS OF INSTALLATION, LOSS OR DAMAGES RESULTING FROM DEPENDENCE ON THIS MATERIAL.

888.755.7772 /// 1919 NW 40TH COURT, POMPANO BEACH, FL 33064 /// WWW.USPMOTORSPORTS.COM

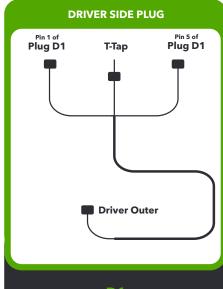



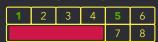


D2

Connect pin 5 into this plug (driver side)




OEM1

Plugs into OEM harness (driver side)

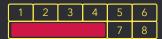

Driver Outer


Plugs into outer tail light (driver side)

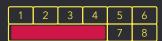


OEM2

Plugs into OEM harness (driver side)



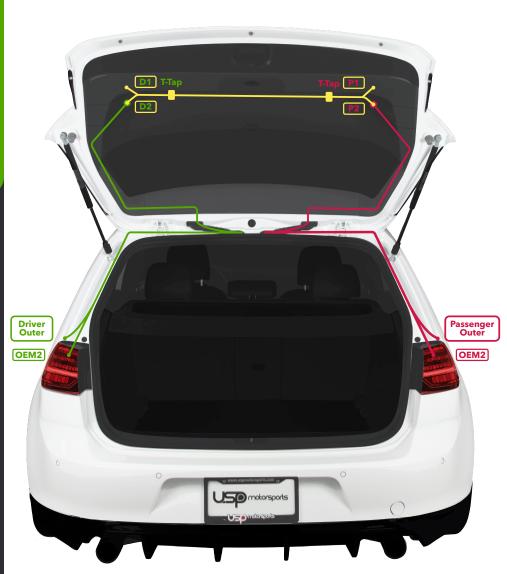


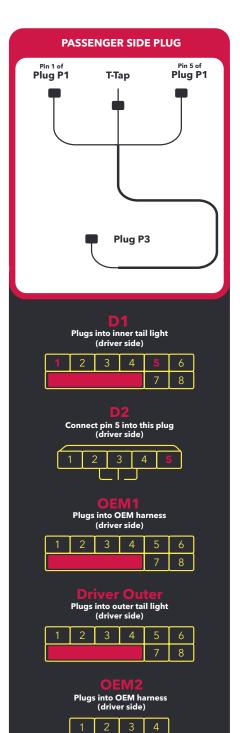

FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



1. Open rear hatch and locate middle cover. Carefully remove by pressing down with force in direction shown. It will pop down.

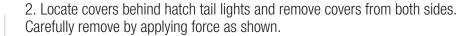







3. Locate connectors behind the hatch lights and push red clip to unlock (1). Then push down clip (2) and unplug the harness. Remove two 8mm nuts from rear of each light. Repeat for other side and unplug OEM harness.

4. Using a razor blade on the drivers side plug, cut off protruding tab as shown. Both sides of plug should be flat. Note: this only needs to be done on the drivers side plug.

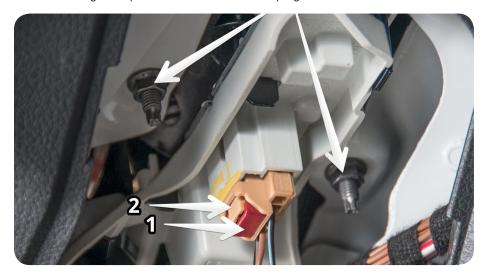


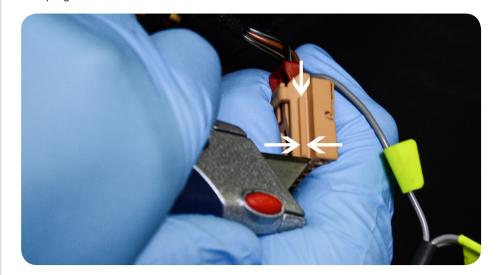

FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



5. Remove hatch lights by first pulling up (1) and then away (2) as shown. Repeat for both sides.

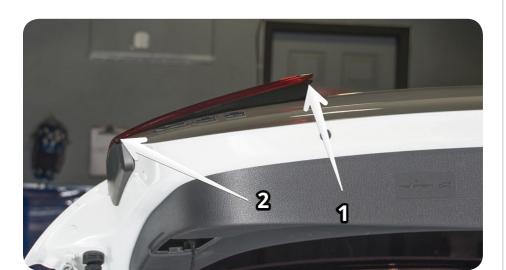

6a. Use pry tool to remove plastic housings on the interior roof portion of the car



6b. Remove hatch top plastic



7. Remove (4) T20 screws from back hatch



FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



8. Carefully use pry tool to remove back hatch plastic. Work from the outside in. It will take some force, but take your time.



9. Once all plastic is removed, snake wires through pillar on both sides.



10. Thoroughly tape wires to snake through opening. One one side is completed, do the same thing for the other side.



11. Feed taped wires through side pillars towards the middle of the roof.



FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



12. Use pry tool to pop off factory rubber tube, once removed snake wires through opening towards top of hatch.



13. Attach outer tail light harness to snake through rubber tube. Be careful not to damage rubber tube. Repeat on both passenger + driver side (harness is labelled)



14. Feed wires that you routed in the rubber tube through the top of hatch opening along column (for outer tail lights)



15. Use (8) zip ties to secure harness to factory wiring for tidiness on both sides + quide and zip tie both side harnesses towards the inner light mounting locations.




FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



16. Lay out + ziptie (4) middle harness along left and right side of hatch (for inner tail lights). Inner harness is also labelled for driver + passenger. Make sure you pay attention to label. The sides cannot be switched.




17. Install new tail lights in reverse order. Sliding them in from the outside first (1), then popping them down into place (2).

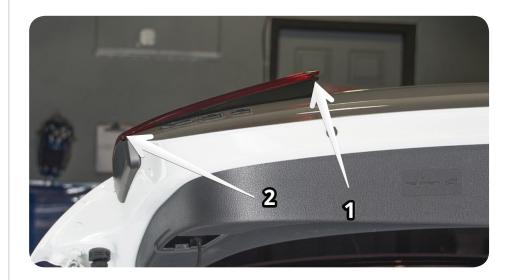

18. Secure new tail lights using OEM 8mm nuts and reconnect harnesses.



19a. Working from the other tail lights -- locate cut-out in rear panelling and pop open on both sides.

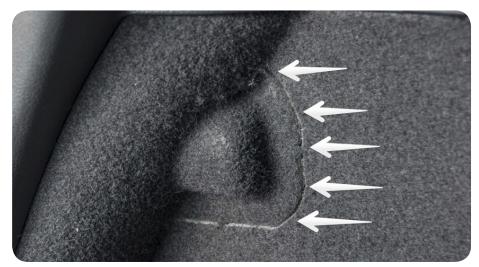


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




19b. Inside panelling cut-out, loosen and remove plastic wing nut screws.



20. Release red clip + remove tail lights just enough to reach the OEM plug between the lights and the car.

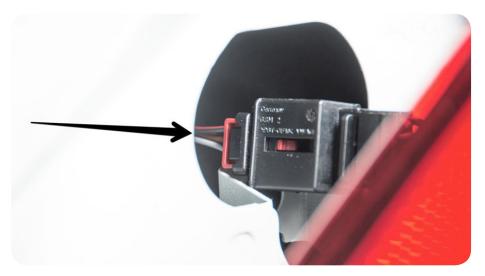

21. Plug facelift harness into OEM harness (Driver Outer).

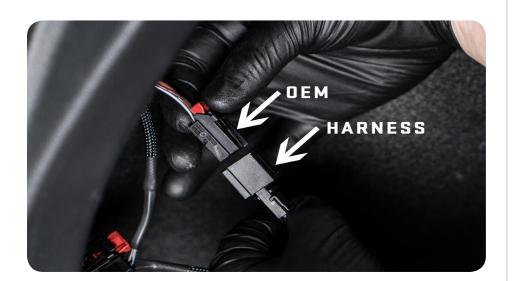

22. Plug remaining facelift harness into light. NOTE: To make things easier, plug the harness into the tail light before securing it into place.



FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



23. Install spring loaded plastic wing nut into hole you removed from. Repeat on other side.




24. Plug PIN 1 (D1/P1) into wiring harness (SLOT 1). D1 + P1 are the same steps for each side of the car.



25. Plug PIN 5 into SLOT 5 (D1/P1) and push the locking tab back in.



26. Use the wire in the previous step labeled "Plug D1/P1 - T-Tap", and insert the wire through the hole on the t-tap. Shut the t-tap to a click to make sure it is secure.

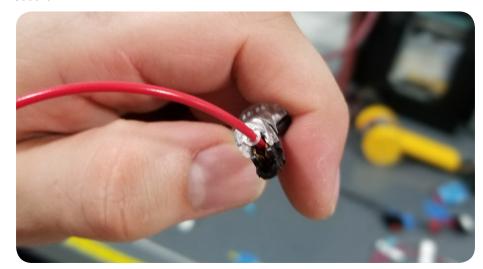


INSTALLATION INSTRUCTIONS FACELIFTED DYNAMIC LED TAIL

FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



27. Plug D2/P2 into OEM plug

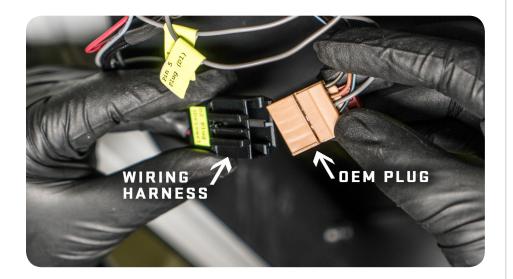

28. Plug D2/P2 into inner tail lights -- NOTE: If you don't push the locking tabs back - they will not plug in.



Coding instructions begin next page

FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7





With everything plugged in, it's now time for coding. Please follow all instructions with extreme precision as this will effect the tail light functionality directly.

1.

- 1. Under Channel (16B) Select ENG116956-ENG116257-Leuchte20BR LA71-Dimmwert AB 20
- 2. Set "New Value" to **127**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116956-ENG116252-Leuchte20BR LA71-Lasttyp 20
- 2. Set "New Value" to **34 LED Bremsleuspchten**
- 3. Select "Do it!" To finalize the change.

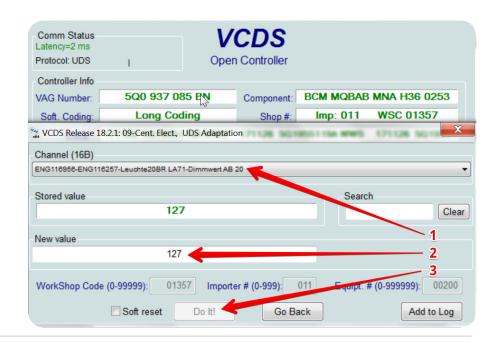

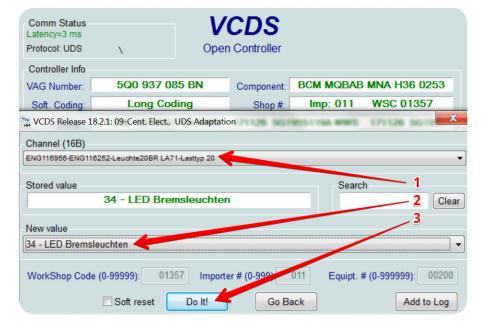


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




3.

- 1. Under Channel (16B) Select ENG116956-ENG116256-Leuchte20BR LA71-Lichtfunktion B 20
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116956-ENG116259-Leuchte20BR LA71-Lichtfunktion C 20
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

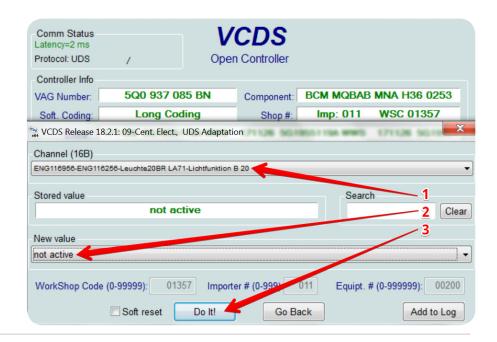

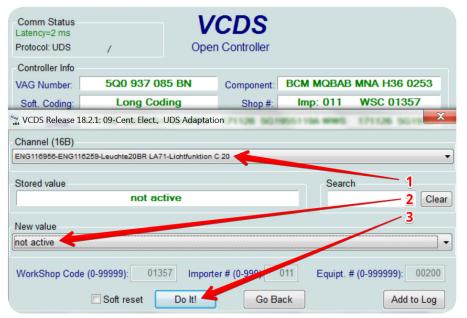


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




5.

- 1. Under Channel (16B) Select ENG116956-ENG116259-Leuchte20BR LA71-Lichtfunktion E 20
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116956-ENG116256-Leuchte21BR RC8- Dimmwert AB 21
- 2. Set "New Value" to **127**
- 3. Select "Do it!" To finalize the change.

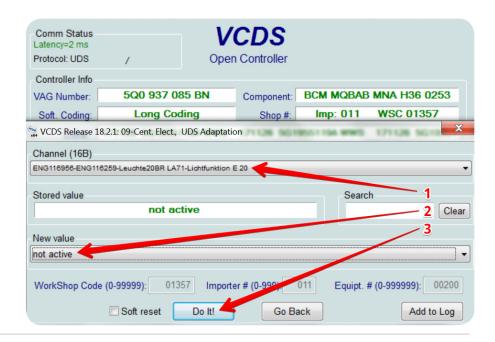

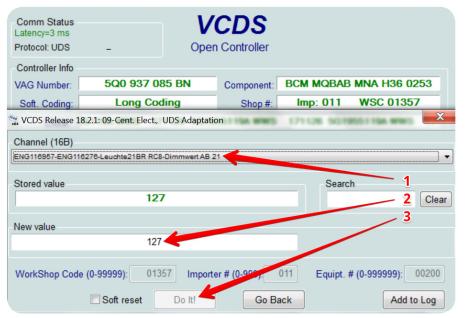


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




7.

- 1. Under Channel (16B) Select ENG116956-ENG116259-Leuchte21BR RC8-Lasttyp 21
- 2. Set "New Value" to34 LED Bremsleuspchten
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116957-ENG116275-Leuchte21BR RC8-Lichtfunktion B 21
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

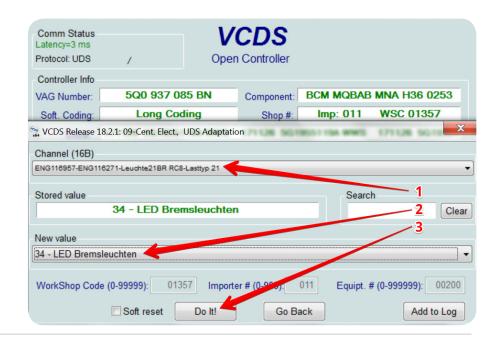

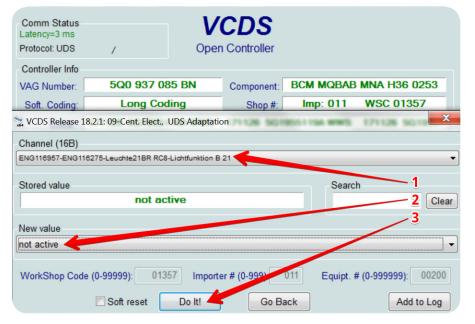


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




9.

- 1. Under Channel (16B) Select ENG116957-ENG116278-Leuchte21BR RC8-Lichtfunktion C 21
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116957-ENG116278-Leuchte21BR RC8-Lichtfunktion E 21
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

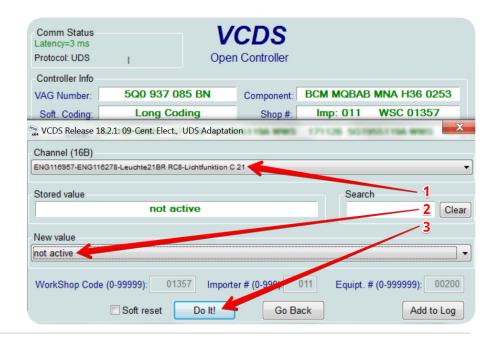

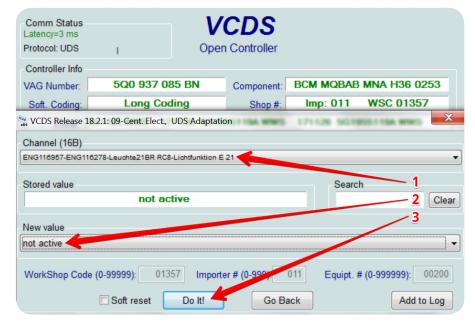


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




11.

- 1. Under Channel (16B) Select ENG116959-ENG116318-Leuchte23SL HLC10-Dimmwert CD 23
- 2. Set "New Value" to **127**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116959-ENG116309-Leuchte23SL HLC10-Lasttyp23
- 2. Set "New Value" to **38 LED Blinkleuchten**
- 3. Select "Do it!" To finalize the change.

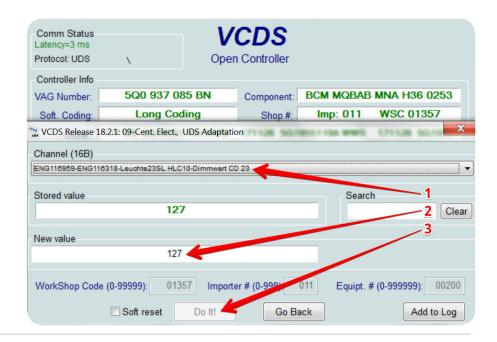

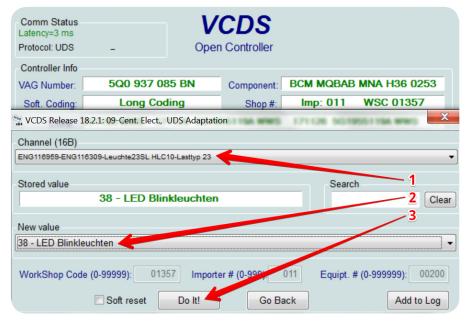


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




13.

- 1. Under Channel (16B) Select ENG116959-ENG116312-Leuchte23SL HLC10-Lichtfunktion A 23
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116959-ENG116316-Leuchte23SL HLC10-Lichtfunktion C 23
- 2. Set "New Value" to **Blinken links Hellphase**
- 3. Select "Do it!" To finalize the change.

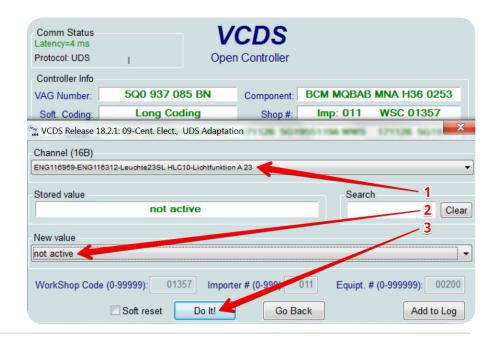

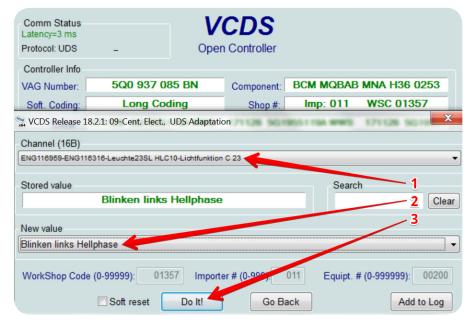


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




15.

- 1. Under Channel (16B) Select ENG116960-ENG116337-Leuchte24SL HRA65-Dimmwert CD 24
- 2. Set "New Value" to **127**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116960-ENG116328-Leuchte24SL HRA65-Lasttyp 24
- 2. Set "New Value" to **38 LED Blinkleuchten**
- 3. Select "Do it!" To finalize the change.

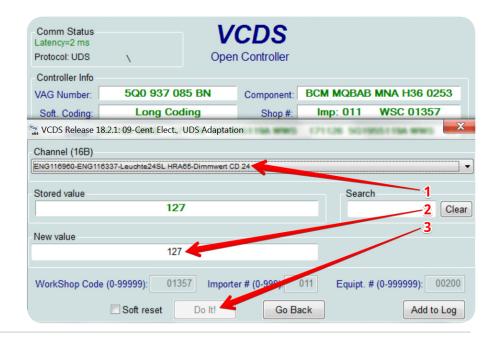

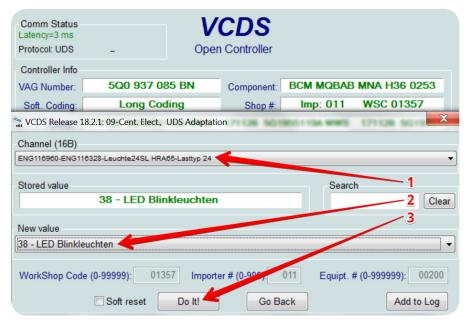


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




17.

- 1. Under Channel (16B) Select ENG116960-ENG116331-Leuchte24SL HRA65-Lichtfunktion A 24
- 2. Set "New Value" to **not active**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116960-ENG116335-Leuchte24SL HRA65-Lichtfunktion C 24
- 2. Set "New Value" to **Blinken rechts Hellphase**
- 3. Select "Do it!" To finalize the change.

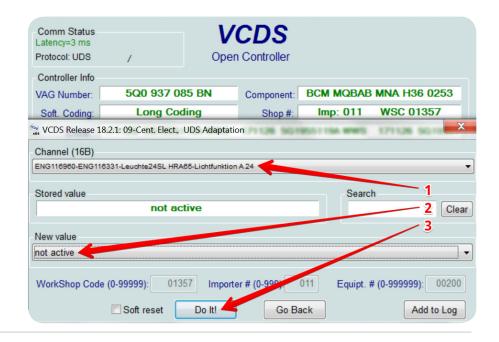

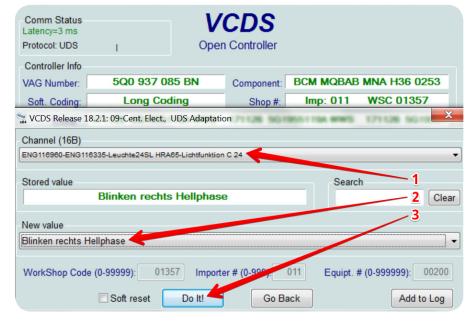


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




19.

- 1. Under Channel (16B) Select ENG116963-ENG116390-Leuchte27NSL RC6-Dimmwert AB 27
- 2. Set "New Value" to **127**
- 3. Select "Do it!" To finalize the change.

- 1. Under Channel (16B) Select ENG116963-ENG116385-Leuchte27NSL RC6-Lasttyp 27
- 2. Set "New Value" to **32 allgemeine LED bis 12W**
- 3. Select "Do it!" To finalize the change.

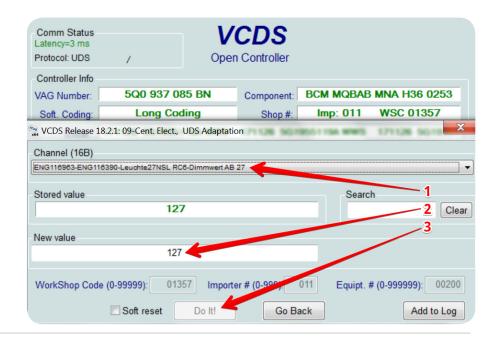

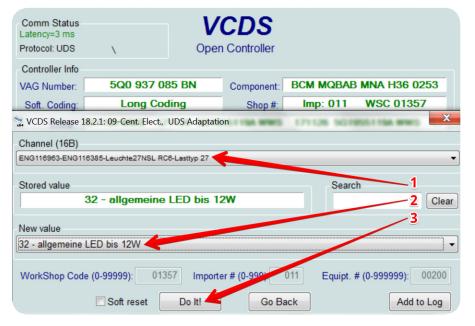


FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7




21.

- 1. Under Channel (16B) Select ENG116964-ENG116580-Leuchte28RFL LC11-Lampendefekbitposition 28
- 2. Set "New Value" to00 (You must input a double zero)
- 3. Select "Do it!" To finalize the change.

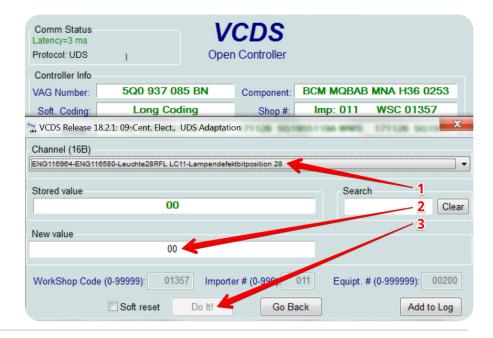

- 1. Under Channel (16B) Select ENG116964-ENG116404-Leuchte28RFL LC11-Lasttyp 28
- 2. Set "New Value" to **32 allgemeine LED bis 12W**
- 3. Select "Do it!" To finalize the change.

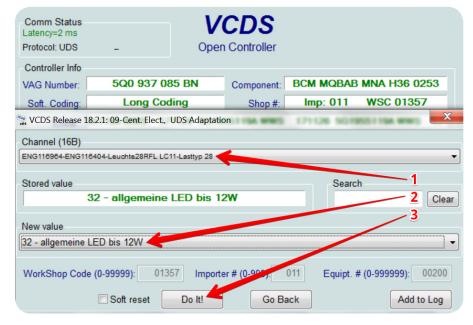

FACELIFTED DYNAMIC LED TAIL LIGHTS WITH HARNESS FOR MK7



23.


- 1. Under Channel (16B) Select
- ENG116964-ENG116407-Leuchte28RFL LC11-Litchfunktion A 28
- 2. Set "New Value" to

Klemme 15 mit Nachlauf bis Fahzeuspgstillstand

3. Select "Do it!" To finalize the change.

24. You are now finished with the coding instructions. Before reinstalling all the panels back in place, test each of the light functions individually. Separate functions are as follows:

- Daytime Running Lights
- Left + Right Turning Signals (Dynamic Scroll)
- Brake Lights
- Reverse Lights
- Ambers Lights

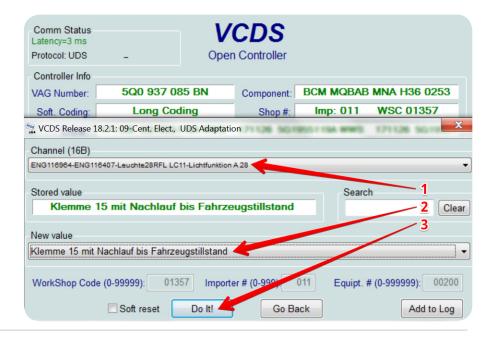

25. After confirming all light functions are correct, go ahead and re-install all panels you removed + enjoy the new tail lights!

