



INSTALL INSTRUCTIONS

UNDER SEAT DRAWER KIT - DRIVER SIDE: MK6 VW
SKU# 4140 MFG# G6-003

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.
PLEASE VISIT WWW.USPMOTORSPORTS.COM AND SEARCH SKU# 4140



TOOLS REQUIRED:

- 10MM TRIPLE SQUARE
- T25 TORX
- DRILL OR IMPACT DRIVER

WHAT'S INCLUDED:

- DRIVER SIDE UNDER SEAT DRAWER
- (3) T25 TORX SCREW
- ADDITIONAL HARDWARE NOT REQUIRED



SKU# 4140 | MFG# G6-003

1919 NW 40TH COURT, POMPANO BEACH, FL 33064
WWW.USPMOTORSPORTS.COM

1. Remove the 4x 10mm triple square bolts that secure the seat to the vehicle.




2a. With the bolts removed, carefully tilt the seat backwards so the underside can be exposed. The three included torx screws will secure the drawer to the underside of the seat. The screws will install into the holes shown below. Since the screws will need to form threads as they are tightened we recommend using a drill or impact driver to tighten the screws.

2b. Loosely install the drawer to the left side mounting points.



3. With the left side mount points loosely installed open the drawer so the right side mounting hole is exposed. Install the remaining T25 torx screw.

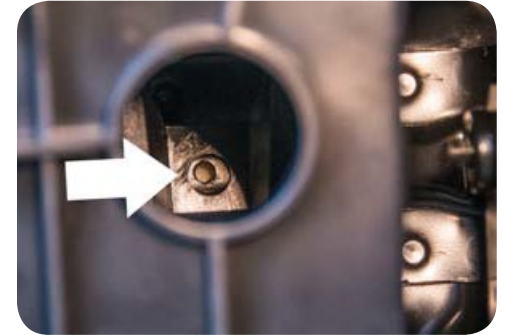

4. Reinstall the seat.

