



# INSTALL INSTRUCTIONS

**HID CONVERSION KIT: MK7 GOLF/GTI**  
SKU# 4852 MFG# RFB-MK7G-INT

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.  
PLEASE VISIT [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM) AND SEARCH SKU# 4852



## ***TOOLS REQUIRED:***    ***WHAT'S INCLUDED:***

- WEDGE TOOL  
(PART #SKU1799)

- (1) TRUNK LED
- (1) GLOVEBOX LED
- (2) VANITY MIRROR LEDS
- (2) REAR DOME LEDS
- (2) FRONT DOME LEDS



SKU# 4852 | MFG# RFB-MK7G-INT

7716 WILES RD. CORAL SPRINGS, FL 33067  
[WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)

**NOTE: LED's are polar sensitive. If they do not illuminate, remove the LED and spin them around so the terminals are now swapped.**

1. Using wedge tool, pry down at front center dome cover.



2. Using wedge tool work around entire front center dome cover. Do not remove center piece containing the buttons, the outer transparent shell will come off separately.



3A. Once transparent outer shell has been removed, the OEM bulbs are now visible. Pull them straight out downwards and replace with new LED's.




3B. Turn on dome lights to insure correct polarity of bulbs, then replace dome cover.

4. Moving to the rear dome light, use the prytool to separate transparent cover as shown.



5A. Locate the two OEM bulbs and remove by pulling down, then replace with RFB LED's.

5B. Switch on both lights to confirm polarity and replace cover by pressing back into place.

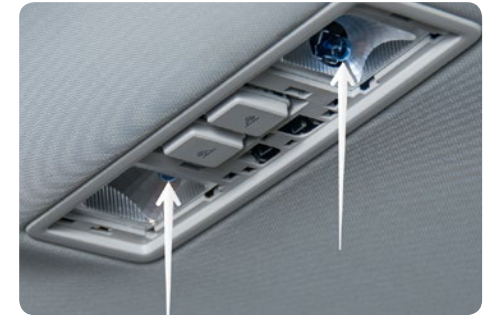

6. Pull down vanity mirrors and use wedge tool to release bulb housings from side closest to the doors first.




7. Remove OEM bulbs and replace with LEDS by snapping ends into notched connectors as indicated.



8. Locate glovebox bulb at the ceiling of the glovebox to the right. Remove housing by pulling down from side furthest away from the door, then unplug.



9. Remove metal cover from housing by pulling at location 1 followed by location 2.

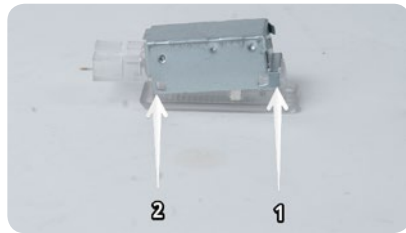

10. After housing has been removed, pull out OEM bulb in direction shown and replace with glovebox LED. Secure metal cover onto housing and following steps in reverse order reconnecting and re-securing into its original location.




11. Locate trunk bulb, just behind passenger side tail light.



12. Remove housing using pry tool as shown and disconnect housing.



13. Remove OEM bulb from housing and replace with trunk LED checking the connections on the two end terminals. Replace into factory location following steps in reverse order.

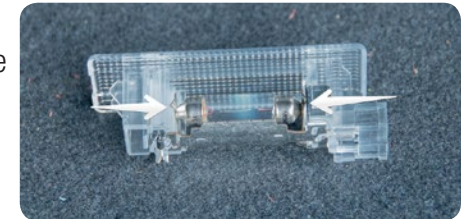

**Enjoy your new LED tail lights!**

\*REMINDER: LED's are polar sensitive. If they do not illuminate, remove the LED and spin them around so the terminals are now swapped.