



INSTALL INSTRUCTIONS

CARBON FIBER FRONT LIP: MK7 GTI
SKU# 5228 MFG# AV-300

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.
PLEASE VISIT WWW.USPMOTORSPORTS.COM AND SEARCH SKU# 5228



TOOLS REQUIRED:


- T25 TORX
- T30 TORX
- WEDGE TOOL (PART# SKU1799)
- 4MM ALLEN KEY





SKU# 5228 | MFG# AV-300

7716 WILES RD. CORAL SPRINGS, FL 33067
WWW.USPMOTORSPORTS.COM

1. Remove the under body splash guard by first removing these 8 torx screws.

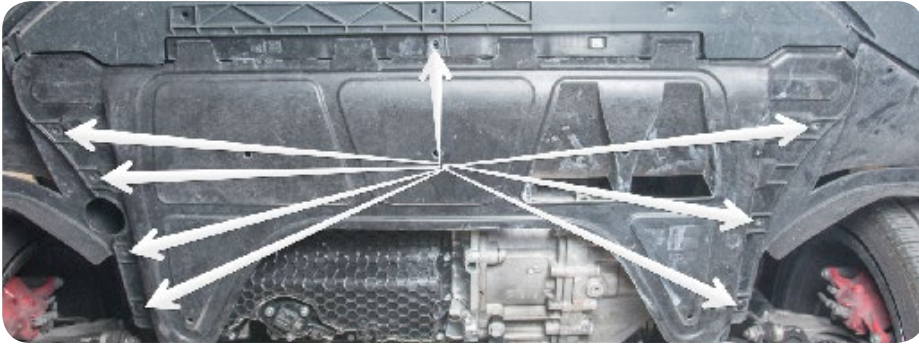

2. Remove two torx screws from side under body splash guard, on each side. Totaling four screws.

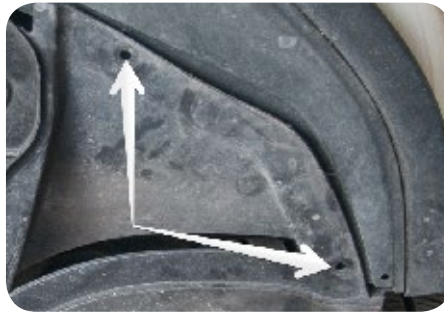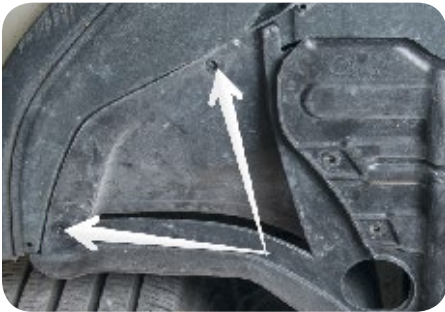

3. Remove two screws from grille (OEM torx or allen keys with USP Clean Bay Bolt Kit)




4. Pull directly up on grille until it pops out as shown.





5. From each fender well remove two visible torx screws and one hidden torx screw at top corner of bumper.




6. Disconnect wiring harness from bumper as shown, then place bumper on a soft non scratch surface.

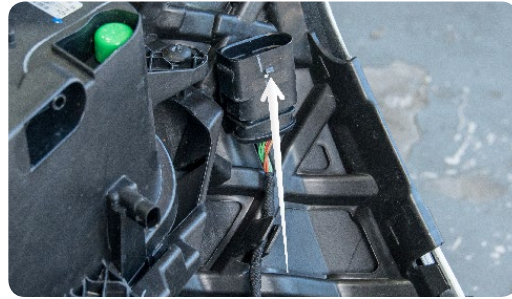

7. **A** Disengage clips as shown and remove air scoops.

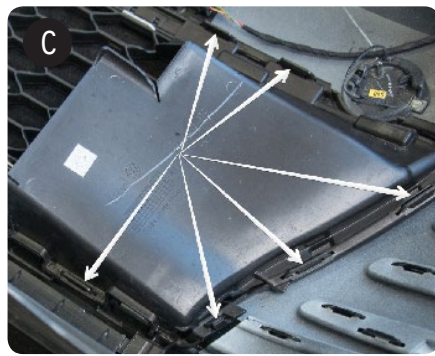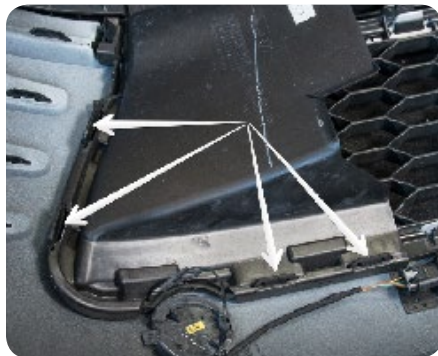

8. Starting from the ends, disengage all clips securing OEM front diffuser.

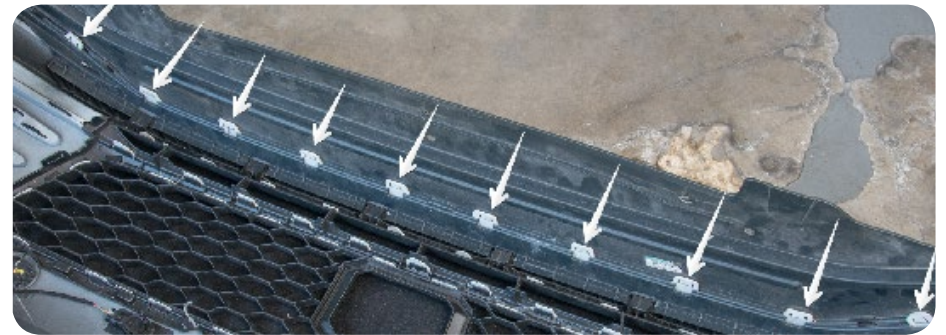

9. Once again starting from one of the ends, pull the grill clips away from the front diffuser one at a time. This will allow the OEM front diffuser to come off. Although this may take one person to pry the clips away as another person pulls the lip out.



10. Install the new Carbon Fiber Front diffuser by catching one end in the fender well side of the bumper.




11. Now on the opposing end, apply some force to push the bumper into the front diffuser corner.




12. Remove 6 allen bolts securing center front piece of diffuser and remove center diffuser piece.



13. Apply pressure inside center of bumper pushing into grille to close any gap. While holding flush, insert self tap screw in underside of grill. Reinstall center diffuser piece to cover this self tap screw.

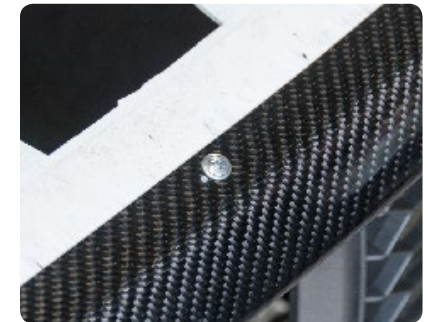

14. Hold diffuser ends flush with bumper and insert two self taps in each side as shown.

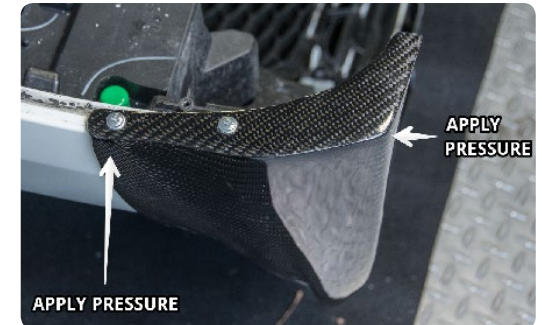

15. Follow steps in reverse order for reassembly and enjoy your new AGGRESSIV CARBON FIBER DIFFUSER!

