



# INSTALL INSTRUCTIONS

**REAR CARBON FIBER DIFFUSER: MK7 VW GTI**  
SKU# 5299 MFG# AV-301

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.  
PLEASE VISIT [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM) AND SEARCH SKU# 5299



## ***TOOLS REQUIRED:***

- T25 TORX
- T30 TORX
- WEDGE TOOL (SKU1799)
- 4MM ALLEN KEY




SKU# 5299 | MFG# AV-301

7716 WILES RD. CORAL SPRINGS, FL 33067  
[WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)

1. Remove one torx from each side securing fender lining to rear bumper.





2. Remove two torx screws from inside of each corner of the bumper.

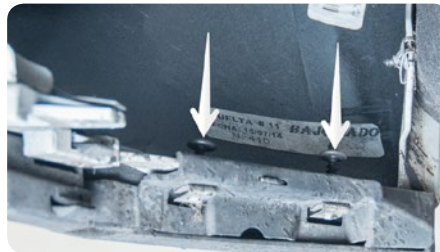

3. Unfasten two plastic screws from rear bumper and remove clips.




4. Pull back on fender lining and slide out plastic which holds rear diffuser into place, on both sides.

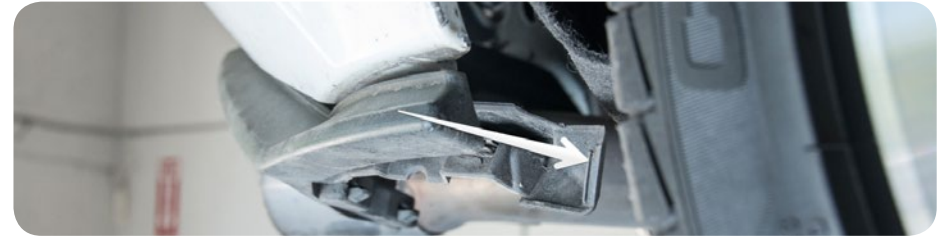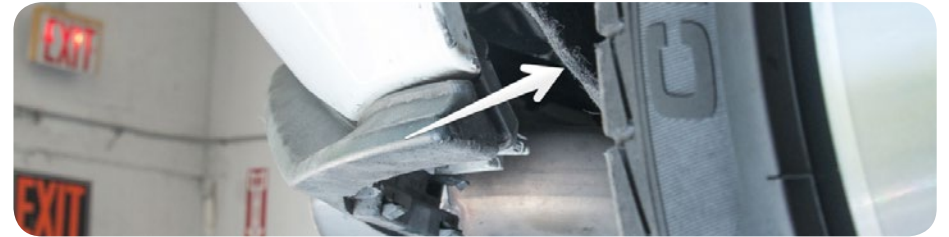

5. Disengage all 14 OEM diffuser securing tabs along inside of bumper and remove OEM diffuser.




6. Peel back adhesive on one side of double sided tape and apply inside Carbon Fiber Rear Diffuser, as shown on both sides.

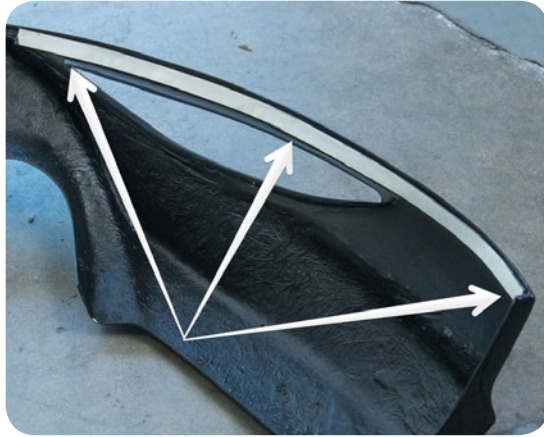

7. Peel back paper liner on double sided tape and hold new Carbon Fiber Rear Diffuser onto bumper carefully. When lined up correctly apply force at double sided tape locations. Then fasten ends onto bumper using supplied screws as shown.



8. Using supplied screws, fasten diffuser onto bumper from below as shown.

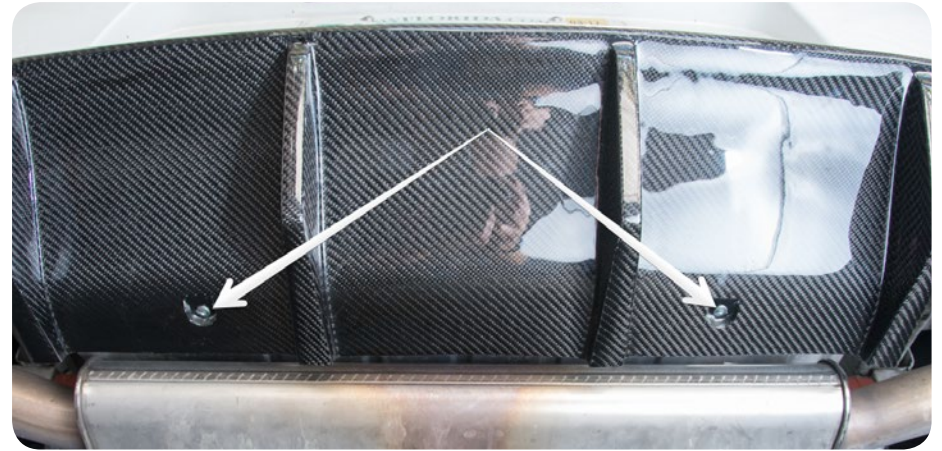

Enjoy Your New Aggressiv Carbon Fiber Diffuser!

