



# INSTALL INSTRUCTIONS

**TURBO MUFFLER DELETE KIT: GEN 1 TSI**  
**SKU# 7480 MFG# SE-004KT**

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.  
PLEASE VISIT [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM) AND SEARCH SKU# 7480



## ***TOOLS REQUIRED:***


- T25 TORX
- T30 TORX
- 3MM HEX
- 4MM HEX
- 5MM HEX
- PLIERS
- 17MM SOCKET & WRENCH



SKU# 7480 | MFG# SE-004KT

7716 WILES RD. CORAL SPRINGS, FL 33067  
[WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)


1. To begin jack up the car and place on jackstands. Remove the passenger side wheel and the (10) T25 Torx screws securing the engine splash guard.

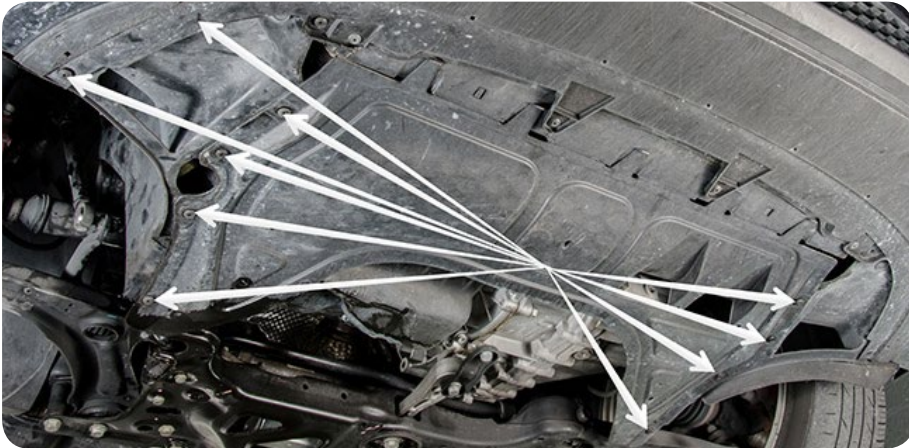

2. Remove (6) T25 torx screws securing the wheel well splash guard and pull the splash guard back.



3. Remove the lower boost pipe by removing (2) T30 torx screws, front C-Clip pipe connection and hose clamp at rear.

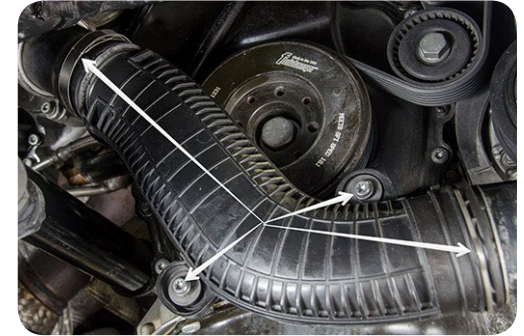

4. Remove the C-Clip from the connector by the turbo in order to remove the hose connector from the factory turbo muffler.




5. Remove (3) 5mm hex bolts which will allow the removal of the factory turbo muffler.






6. The N75 Valve will be moved slightly to allow for clearance. Remove the (2) 4mm hex bolts and disconnect the top silicone hose from the turbo and from the N75 valve.

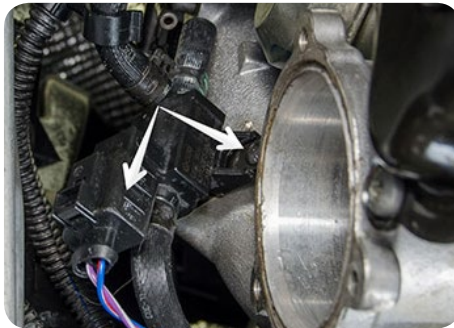


7. Cut down the top N75 hose to a final length of 1.5 inches and place back on N75 valve with the factory clamps.




8. Mount the supplied bracket onto the turbo using the original 4mm hex bolts. Then mount the N75 valve onto the new bracket using the included 3mm hex bolts and reconnect the hoses with the original clamps. Ensure that the O-Ring on the turbo stays in the original groove. If the O-Ring falls out, or does not stay in place use a small amount of grease to hold it in place.

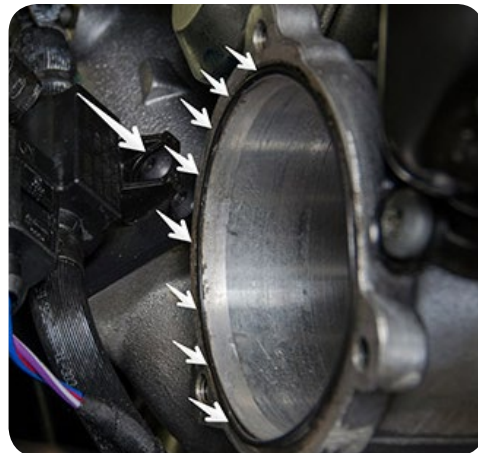

9. Install the included O-Ring into the groove on the smaller end of the turbo muffler delete. If it is not staying in the groove, use a small amount of grease to ensure the O-Ring does not fall out. Then install the turbo muffler delete and secure using the (3) factory hex bolts.

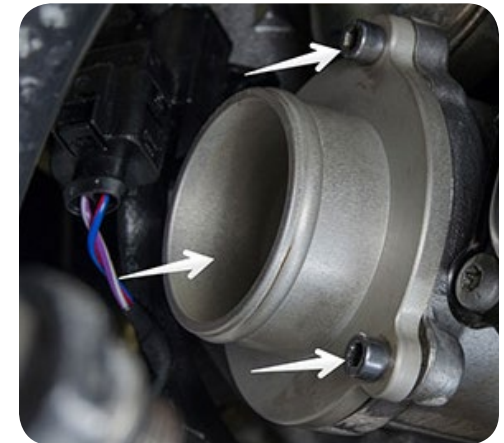

10. Install the included 90 degree silicone hose with the (2) supplied hose clamps. Make sure the hose is pushed all the way onto the turbo muffler delete to allow for maximum clearance from the frame rail.

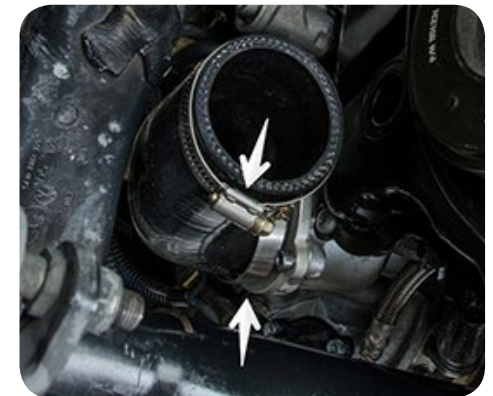

11. Reinstall the lower boost pipe, splash guards and wheel in reverse order. Torque lug bolts to 100 Ft Lbs.

**Enjoy your Spulen Turbo Muffler Delete!**