

# INSTALLATION INSTRUCTIONS

## CARBON FIBER SPOILER: MK6 VW JETTA

SKU# 8064 MFG# AV-306

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.  
PLEASE VISIT [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM) AND SEARCH SKU# 8064



### TOOLS REQUIRED

- WEDGE TOOL (SKU1799)
- BLUE PAINTERS TAPE

### WHAT'S INCLUDED

- CARBON FIBER SPOILER
- DOUBLE SIDED TAPE



*THIS MATERIAL IS FOR REFERENCE ONLY. IMPROPER INSTALLATION OR MISUSE OF THIS PRODUCT COULD RESULT IN FAILURE. USP MOTORSPORTS IS NOT RESPONSIBLE FOR ERRORS OF INSTALLATION, LOSS OR DAMAGES RESULTING FROM DEPENDENCE ON THIS MATERIAL.*

888.755.7772 /// 1919 NW 40TH COURT, POMPANO BEACH, FL 33064 /// [WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)


## INSTALLATION INSTRUCTIONS

CARBON FIBER SPOILER  
MK6 VW JETTA

**AGGRESSIV**  
ACCESSORIES

2


1. If your car does not have an OEM spoiler skip to Step 4. If your car does have the OEM spoiler, begin by applying blue painters tape along the ridge of the trunk just below the wing.

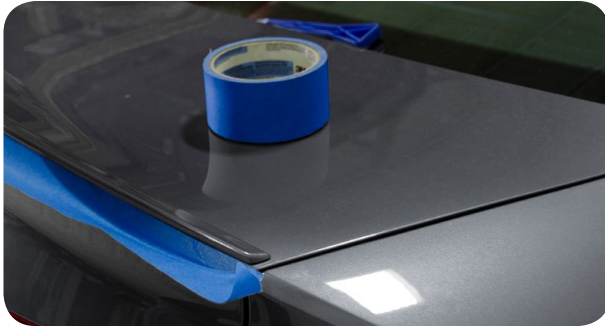

2. Using the wedge tool, carefully pry up on your OEM spoiler releasing the double sided tape. Ensure that the wedge tool is resting on the blue painters tape for leverage. Work your way across the entire spoiler until all the double sided tape has been separated.



3. Carefully go over your trunk, to remove any double sided tape residue.

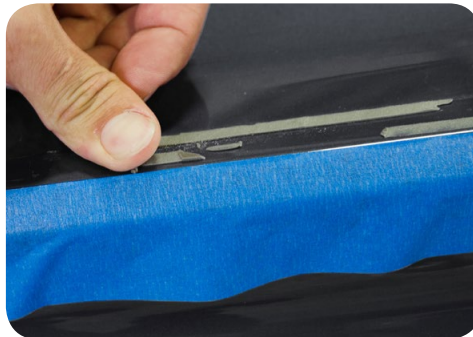

4. Using the supplied double sided tape, run one long strip along the bottom side of the Aggressiv Carbon Fiber Spoiler.



5. Peel back the protective layer from the double sided tape, and carefully place onto trunk. Thoroughly apply pressure to the wing to ensure that the double sided tape adheres to the trunk.



6. Enjoy your new Aggressiv product!

