



INSTALL INSTRUCTIONS


MK7 GTI CLEAN BAY BOLT KIT
PART# CBBC-MK7G

7716 WILES RD. CORAL SPRINGS, FL 33067

WWW.USPMOTORSPORTS.COM

WHAT'S INCLUDED:

- A. STAINLESS STEEL 6MM SCREW (20MM LENGTH) X8
- A1. STAINLESS STEEL 6MM FLUSH WASHER X10
- B. STAINLESS STEEL 5MM SCREW X4
- B1. STAINLESS STEEL 5MM FLUSH WASHER X4
- C. STAINLESS STEEL 6MM SCREW (35MM LENGTH) X2
- D. THREADED INSERT X4

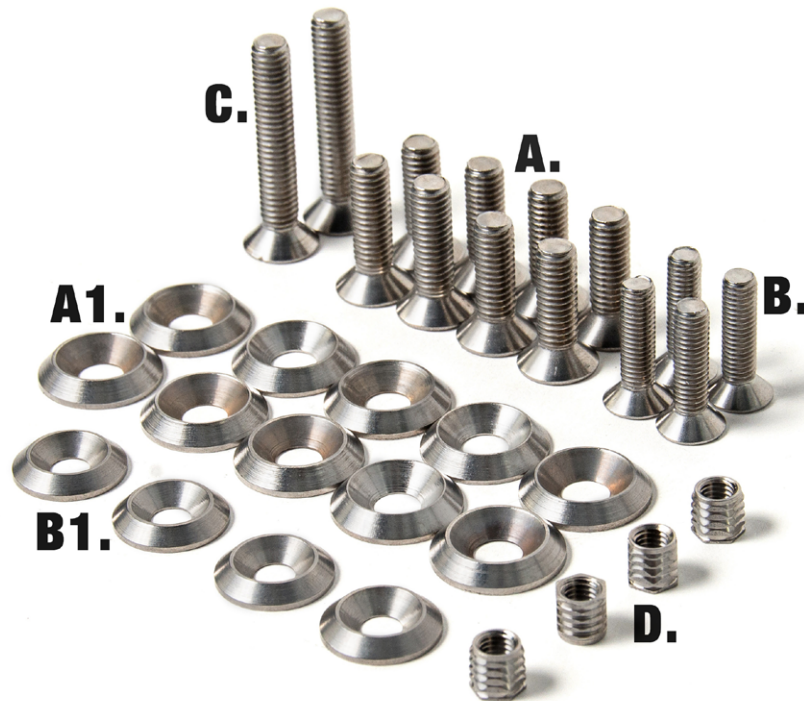

TOOLS REQUIRED:


- T-30 TORX
- T-25 TORX
- RATCHET
- MALLET
- DRILL



INSTALL KIT SOLD SEPARATELY
PART# CBBC-IK

- 6.2MM DRILL BIT
- 3MM ALLEN KEY
- 4MM ALLEN KEY

1. Remove factory bolts from indicated locations and install bolts (A) and washers (A1).

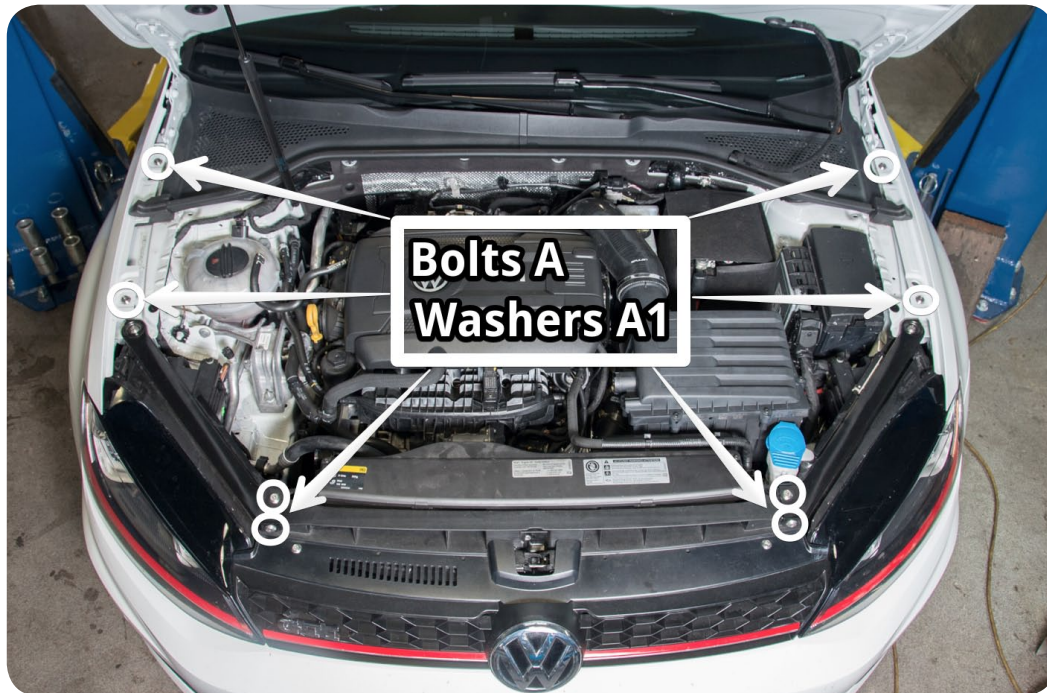

2. Remove factory bolts from indicated locations.



3. Remove factory bolts from indicated locations.



4. Measure 0.3 inches from the end of the 6.2mm drill bit and mark depth with easily visible tape.
(Drill bit included in optional install kit).

Drilling too deep may cause damage to radiator or a/c condenser.



5. Drill out the 4 holes indicated in step 2, stopping at the 0.3 inch depth marked.



6. Thread screws (B) into threaded inserts (C) until screw is flush with bottom of insert. Align insert and the screw into holes drilled in step 4. Tap top of screw head with mallet until insert is flush with plastic (this will require some force).



7. Remove screw, and make sure insert is flush with plastic. Reinstall screw using washer (B1), gently threading into insert until snug. Once snug, turn another 90 degrees to secure (use caution not to use excessive torque on these screws).

