



INSTALL INSTRUCTIONS

SPULEN MK7/A3/S3 TURBO OUTLET PIPE

7716 WILES RD. CORAL SPRINGS, FL 33067

WWW.USPMOTORSPORTS.COM

WHAT'S INCLUDED:

1. LOWER OUTLET PIPE
2. UPPER OUTLET PIPE
3. SILICONE COUPLER
4. HOSE CLAMP X2
5. M6 BOLT (NOT PICTURED)



TOOLS REQUIRED:

- T-25 TORX
- T-30 TORX
- 7MM SOCKET
- 8MM SOCKET
- 5MM ALLEN SOCKET
- PLIERS

Removing the Factory Intake:

1. Remove the 2 T-25 torx screws securing the front intake snorkel to the radiator support.



2. Remove the coolant line from the front intake snorkel.



3. Remove the front intake snorkel by pushing the passenger side of the snorkel towards the engine and then rotating upwards.



4. Remove the vacuum hose and secondary air pump hose if equipped.



5. Remove the clamp securing the inlet hose to the air box.



6. Grasp the factory air box and remove by pulling up.



7. Remove the 7mm clamp securing the inlet hose to the turbo.



Removing and Installing the Outlet Pipe:

8. Remove the 8x T-25 screws securing the lower splash guard.




9. Remove the T-30 screw (blue arrow) and loosen the 7mm hose clamp (red arrow).



10. Remove the clips attaching the wire harnesses to the factory pipe. Depending on your vehicle there will be either 3 or 4 clips.



11. Remove the T-30 torx securing the pipe to the block (red arrow). Loosen the 7mm hose clamp securing the intercooler hose to the factory pipe.
12. Remove the factory pipe from the bottom of the car. This will require some wiggling and turning.

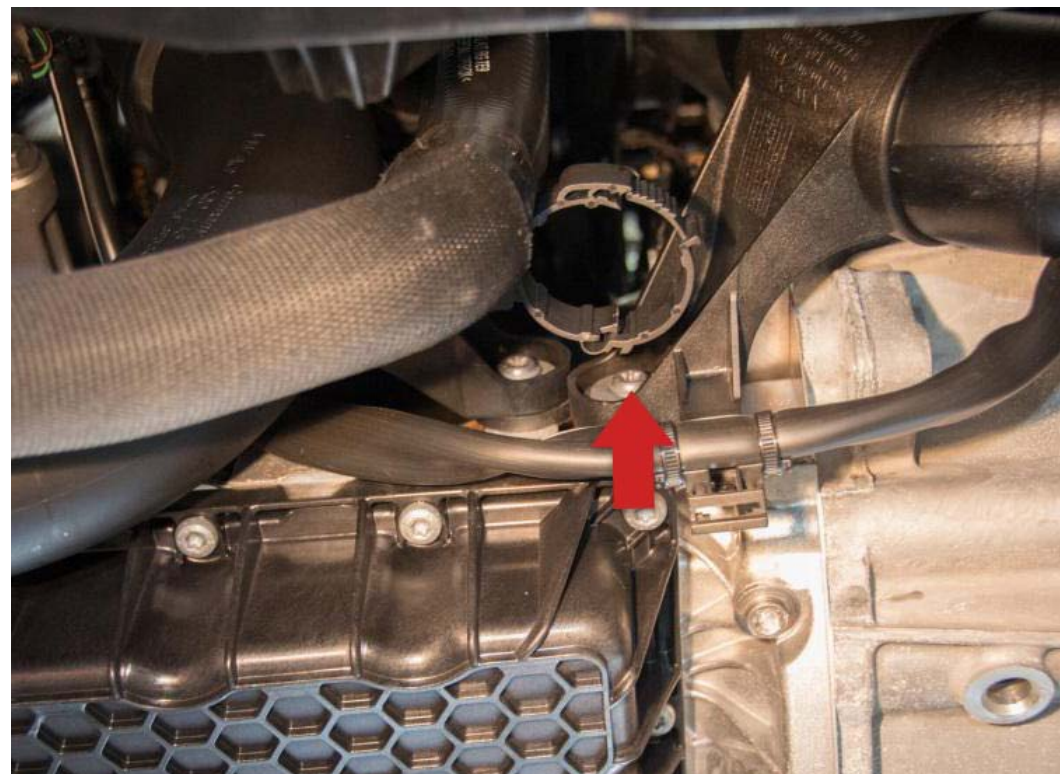

13. Install the upper outlet pipe into the coupler at the turbocharger. Install the lower outlet pipe from the top of the engine bay. Install the included couplers and clamps onto the lower outlet pipe.



14. From the bottom of the engine bay secure the lower outlet pipe to the block using the supplied allen bolt (red arrow).



15. Position the outlet pipe allowing proper clearance between the radiator hoses, fans, and shift linkage on top of the transmission. Once positioned properly tighten the 7mm hose clamp at the turbocharger and 8mm clamps between the outlet pipes.



16. Reconnect the intercooler hose disconnected in step 10.

17. Reinstall the lower splash guard and intake system.