



# INSTALL INSTRUCTIONS

SPULEN REAR DIFFERENTIAL MOUNT- AUDI B8 PLATFORM

7716 WILES RD. CORAL SPRINGS, FL 33067


[WWW.USPMOTORSPORTS.COM](http://WWW.USPMOTORSPORTS.COM)

## WHAT'S INCLUDED:

1. FLAT WASHER
2. URETHANE BUSHING
3. STEPPED WASHER
4. ALLEN BOLT

## TOOLS REQUIRED:

- 16MM SOCKET
- 8MM ALLEN SOCKET
- RACHET
- TORQUE WRENCH
- TRANSMISSION OR FLOOR JACK

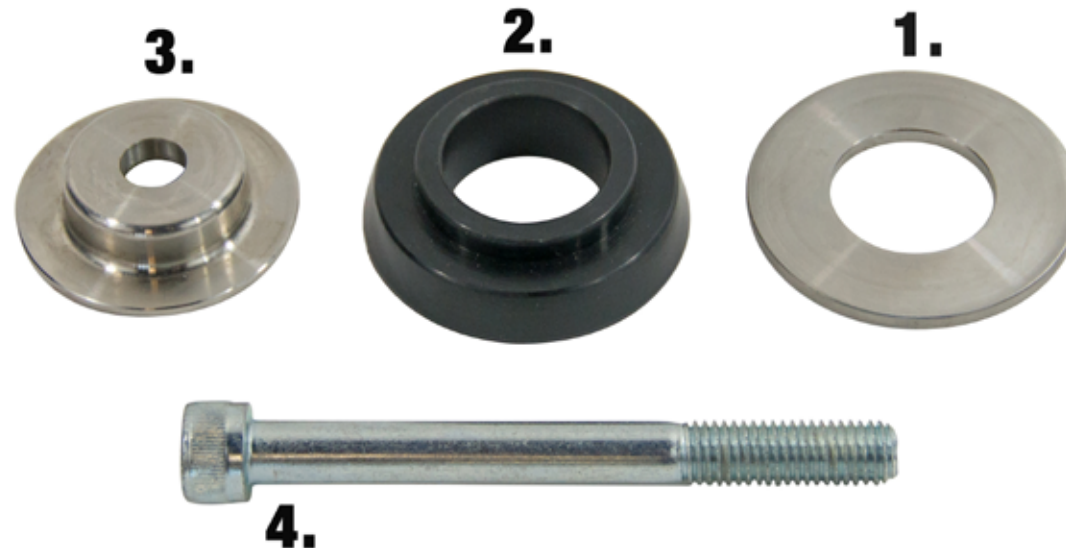

1. Remove the factory 16mm bolt.



2. Raise the differential approximately 1 inch using a floor or transmission jack.



3. With the differential raised, install the urethane bushing and flat washer on top of the factory differential mount. Once in place, lower the differential.



4. Install the stepped washer and secure the differential with the supplied 8mm allen bolt.



5. Torque the allen bolt to 55nm.

