



INSTALL INSTRUCTIONS

SPULEN REAR DIFFERENTIAL MOUNT AUDI B6/B7 A4/S4/RS4

7716 WILES RD. CORAL SPRINGS, FL 33067

WWW.USPMOTORSPORTS.COM

WHAT'S INCLUDED:

1. SPULEN REAR DIFFERENTIAL MOUNT




TOOLS REQUIRED:

- 16MM SOCKET
- 16MM WRENCH
- RACHET
- 8MM ALLEN SOCKET
- TORQUE WRENCH
- TRANSMISSION OR FLOOR JACK

1. Remove the 16mm nut securing the through bolt on the factory differential mount.



2. Support the rear differential with a floor jack or a transmission jack. Once supported, remove the 3x 8mm allen head bolts securing the mount to the differential.

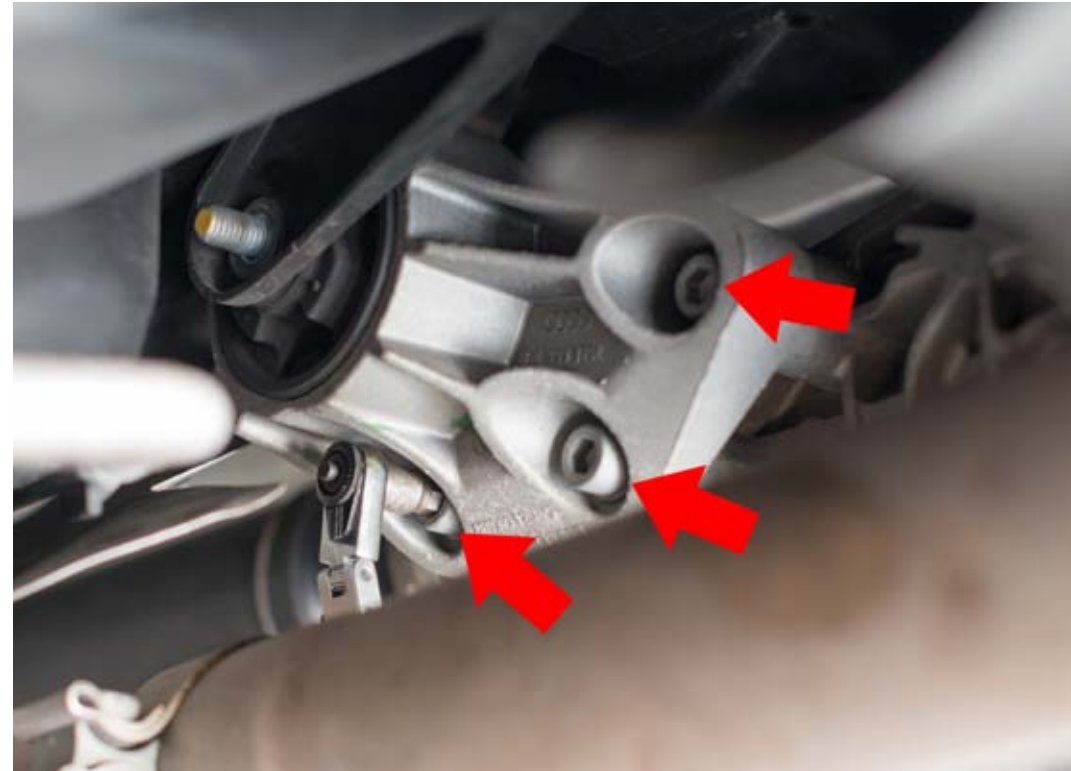

3. With the bolts removed, carefully lower the rear differential 1-2 inches. Once the differential has been lowered, the through bolt can be slid towards the passenger side of the car and removed. Once the bolt is free from the mount, remove the mount.



4. Install the Spulen mount and reinstall the through bolt.



5. Raise the differential back up and secure the differential to the Spulen mount using the 3x 8mm allen bolts. Reinstall the nut on the through bolt.
6. Torque the 3x 8mm allen bolts to 40nm and the through bolt to 45nm.

